



PHILLIP JEFFRIES LTD. HANGING INSTRUCTIONS

GRECIAN SQUARES WALLCOVERING

STOP: DO NOT CUT OR INSTALL UNTIL YOU HAVE READ THESE INSTRUCTIONS!

Thank you for choosing this fine hand crafted wallcovering. For the best results, we believe that a professional wallcovering installer should hang these wallcoverings.

DESCRIPTION:

Step back in time with the classic **GRECIAN SQUARES** collection. Hand crafted by artisans, each 13.5" square is hand cut and laminated onto a non-woven backing for a unique parchment effect. Four layers of colored and metallic inks are hand applied to create depth and drama. Available in seven colorations, the collection is fit for the gods.

PREPARATION:

Before you cut and hang, please be sure you have:

1. The correct wallcovering and the correct amount of wallcovering to finish the job.
2. Inspect the wallcovering carefully to ensure it is free of defects. Please note that the Grecian Squares is a handmade wallcovering and features subtle variations in color and texture. These are characteristics should not be considered defects.

If no defect is evident before installation, the material should be inspected after three (3) strips are installed. If any defect is evident at this time (or at any point in the installation) no additional material should be hung until Phillip Jeffries Ltd. is notified. **NO CLAIMS WILL BE ALLOWED FOR MORE THAN (3) STRIPS ON THE WALL.** All claims must be made within 60 days of the invoice date. No labor claims will be allowed at any time.

BUILDING & MATERIAL CONDITIONS: The building must be weather-tight with HVAC settings (including pressure, temperature and relative humidity) the same as those of an occupied building for three days prior to, throughout installation and three days after installation. The walls must be structurally sound including elimination of sources of moisture accumulation into the wall or wall cavity. The wallcovering must be in a clean and dry condition and must be stored at normal occupied building temperature and humidity for at least three days prior to installation. All adhesives and primers must be new, good quality, commercial grade materials, which have not been contaminated.

**IF YOU HAVE ANY QUESTIONS, PLEASE STOP AND CONTACT
PHILLIP JEFFRIES LTD. BEFORE PROCEEDING.**

WALL PREPARATION:

1. The walls to be covered must be properly prepared to insure that the wallpaper will adhere to the wall surface. Even the strongest adhesive can only work when the wall surface is clean and properly prepared.
2. Phillip Jeffries recommends that installers use a hard, acrylic, pigmented, wall-protecting primer that is **SPECIFICALLY** made for WALLCOVERING INSTALLATION and WALL PROTECTION.

DO NOT utilize R-35 on its own as a primer as R-35 is a light-duty adhesion promoting sizer, not a wall-protecting, wallcovering primer.

3. Allow the primer to dry thoroughly before hanging.



PHILLIP JEFFRIES LTD.

HANGING INSTRUCTIONS

GRECIAN SQUARES

STOP: DO NOT CUT OR INSTALL UNTIL YOU HAVE READ THESE INSTRUCTIONS!

INSTALLATION

TRIMMING

1. The edges are untrimmed and will require cutting a precision edge on your work table. Do not double cut on the wall.
2. Trimmed width is 27" (68.6 CM.). Dry trim the edges.
3. Each shipment contains bolts with consecutive numbers. This is the order it was manufactured and should be followed during installation.
4. Trim selvage approximately 1/4" to create the "faux grout line" that repeats throughout this square pattern. Next strip, trim to the exact edge of squares, cutting off all "faux grout line". NOTE: Since this a handmade product, edge of squares will vary slightly. Base your trim line on square that is furthest to the edge, with no "faux grout line" showing.
5. Trim edges with a VERY sharp razor blade. Change your blades often.


ADHESIVE

1. We recommend a clear, pre-mixed vinyl adhesive with low water content. Do not dilute.
2. Apply the paste to the back of the paper using a soft nap roller, which will become flexible and easy to hang.
3. Book paper for at least 20 minutes.
4. Additionally, if required pre-paste the wall, allow wall to tack and apply strip.
5. Do not add excessive water to the paste as it may cause the backing paper to pull away from the front.
6. It is important to keep the face of the wallcovering free of adhesive and water.

MATCH

1. Repeat is 13.5" (34.3 CM.)
2. Trim selvage approximately 1/4" to create the "faux grout line" that repeats throughout this square pattern. Next strip, trim to the exact edge of squares, cutting off all "faux grout line". NOTE: Since this a handmade product, edge of squares will vary slightly. Base your trim line on square that is furthest to the edge, with no "faux grout line" showing.
3. Seams should be butted together to create a straight match and continuous square pattern (see diagram).

Seam at Dotted Line

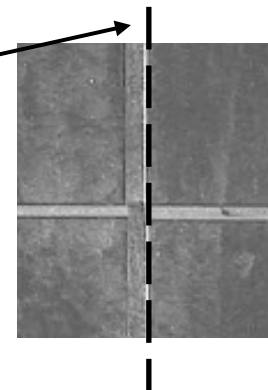

TIPS

1. Use a plastic smoother when hanging, so that you do not damage the face of the wallcovering. When smoothing, work from center out to edges.
2. DO NOT allow paste or excessive water to stain the front of the wallcovering. Both paste and excessive water will change the color of the face of the wallcovering.
3. Paste, trim and hang one strip at a time. Each shipment contains bolts with consecutive numbers. This is the order it was manufactured and should therefore be installed.
4. For darker wallcoverings, consider priming walls with a tinted primer that matches color of wallcovering.
5. Consider using a heat gun for ease in bending wallcovering around corners.
6. Gently use a seam roller if needed on seams and "faux grout lines".